


Ultrasonic Cutter User Manual





SONIC SABER

Product Specifications

Power Requirement DC 12V ; 3A

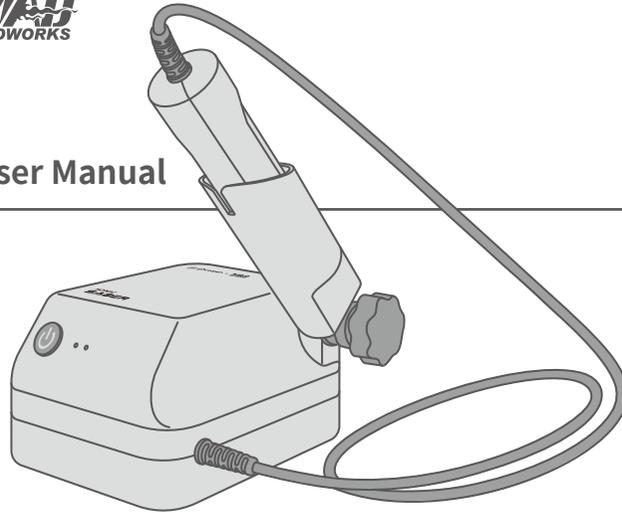

01 Step-by-Step Instructions

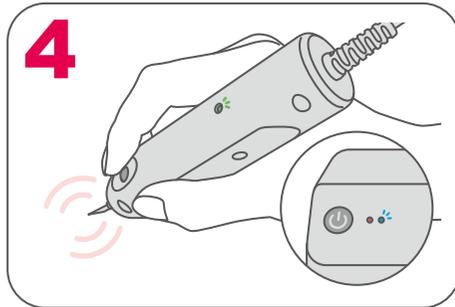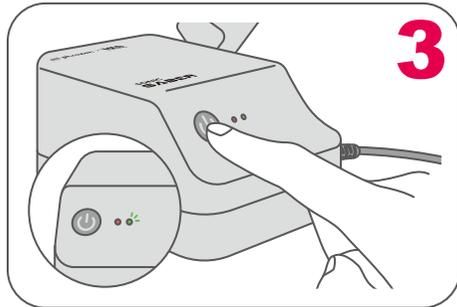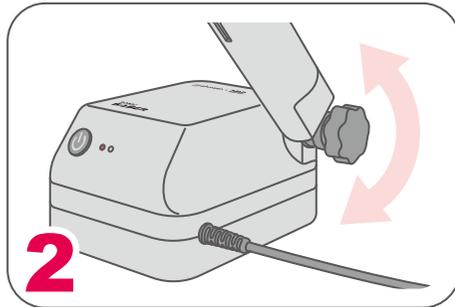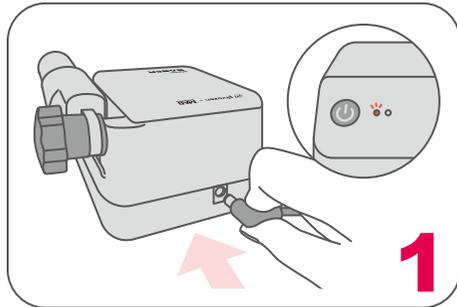

02 Operating Manual

Power Light

After the power is plugged in, the Power Light will light up automatically.

Power Button

Machine Status Indicator Light

Green Light | Machine is working properly.

Blue Light | Ultrasonic knife is in use.

* To turn off the power button, please long press for 2 seconds.

* After turning on the unit, press the switch to start auto-synchronization. The unit is ready when the indicator light changes from blue to green.

Shaft

Rotate the shaft to adjust the angle of the Ultrasonic Knife.

Machine Status

When the tool is in use, the blue indicator light will light up.

Ultrasonic Switch

When in use, this button must be held down. If pressed for more than 2 min, the tool will stop working automatically.

Ultrasonic Blade

Please use carefully to avoid cutting and/or hurting yourself.

⚠ Key Notes Before You Start

- | Please DO NOT touch the product with wet hands.
- | Please wear cut-resistant gloves when handling the product.
- | DO NOT expose the machine to liquids of any kind.
- | If The device is exposed to water, discontinue use immediately.
- | Please do not use this product to cut oil paper and/or any other flammable objects.
- | DO NOT point the Ultrasonic Knife at others.
- | Keep away from children.
- | Please DO NOT use this product to cut metal or glass.
- | DO NOT touch the blade immediately before or after use as high temperatures can cause burns.
- | Danger - High Voltage! Non-professional personnel should avoid disassembling the product on their own to prevent injury from accidental touch.
- | The included power cord set packaged with the main unit cannot be used with electrical equipment other than the specified device.

Maintenance : Please use sanitizing alcohol to clean the exterior of the device. Do not use any oily or corrosive liquids to clean the device.



Help Center



Facebook



YouTube




Instagram

超音波刀使用說明





SONIC SABER

產品規格

適用電壓 DC 12V ; 3A

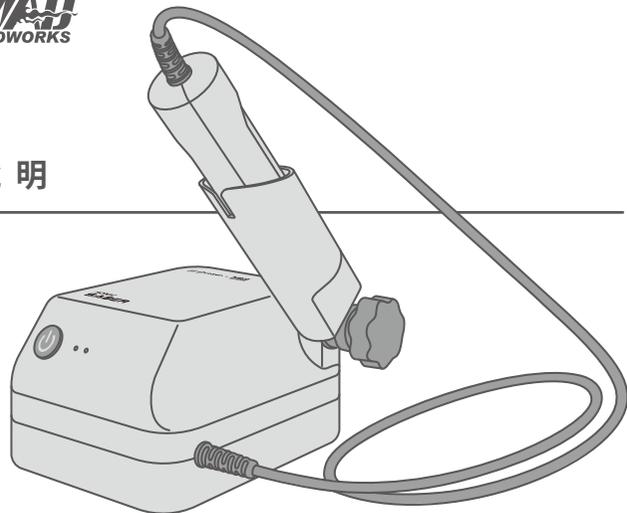

01 使用步驟

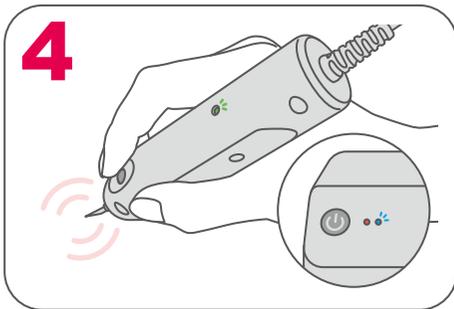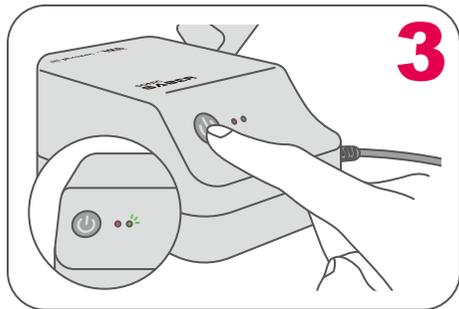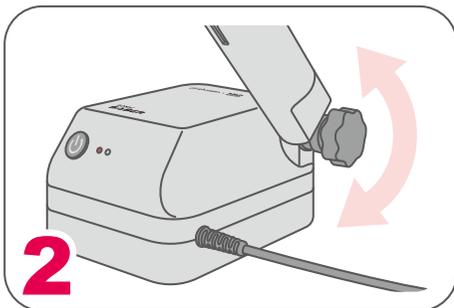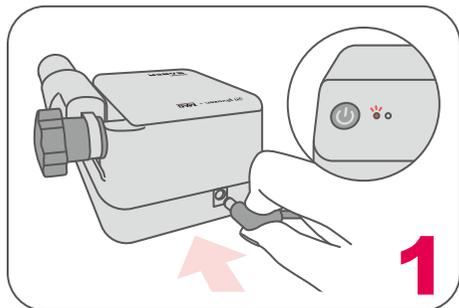

02 操作介紹

電源燈

機台連接電源後
將會亮紅燈。

電源鍵

狀態指示燈

- 綠燈 | 機台正常運轉。
- 藍燈 | 超音波刀使用中。

* 請長按電源鍵 2 秒關閉電源。
* 每次開機後，輕按刀身開關進行頻率掃描。待指示燈由藍色轉換回綠色後，即可開始使用。

轉軸

轉動轉軸可調整刀具
擺放角度。

使用狀態燈

超音波刀使用中亮燈。

超音波開關

使用時，須按壓開關
進行切割。若持續按
壓超過 2 分鐘，將自
動停止運作。

刀片

使用時請小心，避免
割傷。

注意 ⚠ 事項

- 使用產品時，請保持手部乾燥。
- 使用產品時，需配戴防割手套。
- 請勿將產品暴露在任何類型的液體中。產品遇水立即停止使用。
- 請勿使用本產品切割油紙等易燃物品。
- 請勿將刀片指向他人。
- 使用產品時請遠離兒童。
- 請勿使用本產品切割金屬或玻璃。
- 產品使用中及使用後請勿直接觸摸刀片；高溫會導致灼傷。
- 高壓電注意，非專業維修人員請勿自行拆卸產品，以免誤觸產生危險。
- 機台附帶的電源線組只能與指定的電器設備一同使用，不得與其他電器設備搭配使用。

保養方式 如需外觀清潔請用酒精擦拭，請勿用油性或腐蝕性的液體擦拭。



聯繫客服



Facebook 台灣站社團



普羅森 Youtube



MADWORKS Youtube